


BB274-DLX4-6-RSB

2012-2015 Ford Interceptor DLX3/4/6 Rear Spoiler Bracket

Please Note: These instructions are provided as a general guideline only. **Some vehicles may require special mounting, wiring, and/or weather-sealing. This is the sole responsibility of the installer.** Star Headlight & Lantern Co., Inc. assumes no responsibility for the integrity of the installation for this or any of its products.

1. Following the manufacturer's instructions, remove the rear spoiler from the vehicle.

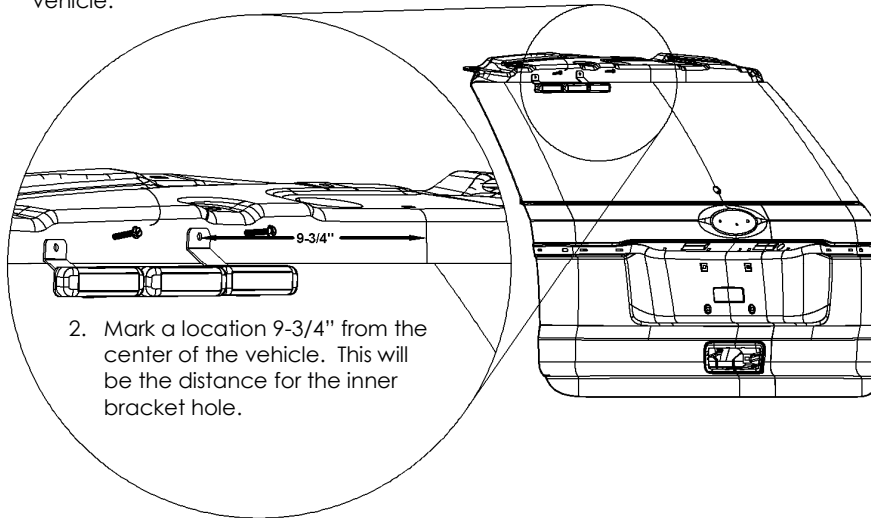

3. Align the hole of the inner bracket leg with the measured distance. Adjust the bracket up or down such that it is level and the top of the lights sits just below the top of the window.
4. Mark both points (inner and outer legs) for your screw holes.
5. Remove the bracket and drill a 3/8" hole in both locations.
6. Install the brackets using the enclosed screws.
TAKE CARE NOT TO OVER-TIGHTEN THE SCREWS AND STRIP THE HOLES!!!
7. Repeat steps 2-6 for the opposite side.
8. Route your wires and connect them as indicated in the manual shipped with your lights.
9. Re-install the spoiler.



Star Headlight & Lantern Co., Inc.
455 Rochester Street Avon, NY 14414 Phone: 585-226-9787 FAX: 888-478-2797
STAR **STAR SIGNAL** **BRADFORD** www.starheadlight.com
SINCE 1889 **STAR WARNING SYSTEMS** **VEHICLE PRODUCTS** **Vehicle Solutions**

PLIT527 REV.— 3/9/15