

# AUXILIARY LIGHT KIT

**IMPORTANT:** Please read all of the following instructions before installing your new light. Failure to follow these safety precautions may result in damage to your light or vehicle and may result in serious injury or death to you and your passengers.

This kit has been designed to provide you with the lights, hardware, and wiring necessary to outfit one bus (or similar vehicle) with auxiliary warning lights. Please review the following instructions, as well as the instructions included with the lights and any other accessories.

## Installation Guide


- Review the diagrams below for proper mounting locations.
- Route the harness in an appropriate location and secure it with the enclosed zip ties.
- Use the enclosed fused lead for connections to the battery.



**Please note that in order to comply with New York state regulations, these auxiliary lights must be connected to the same power source as the high mounted crossing lamps such that the auxiliary lights activate simultaneously with the high mounted crossing lights.**

**New York State regulations require that the lights are programmed for a "non-strobing" type pattern (i.e. singleflash).**

- Refer to the instructions enclosed with the lights and mount them accordingly.
- Use the included butt splices to connect the leads from the lights to the harness. After crimping, **use a heat gun to seal the butt splices** to help reduce corrosion. Use the smaller butt splices for connections with two wires. Use the larger blue butt splices when connecting 3 or more wires, or if the wires are 16AWG (such as the ones from the optional connector boxes).

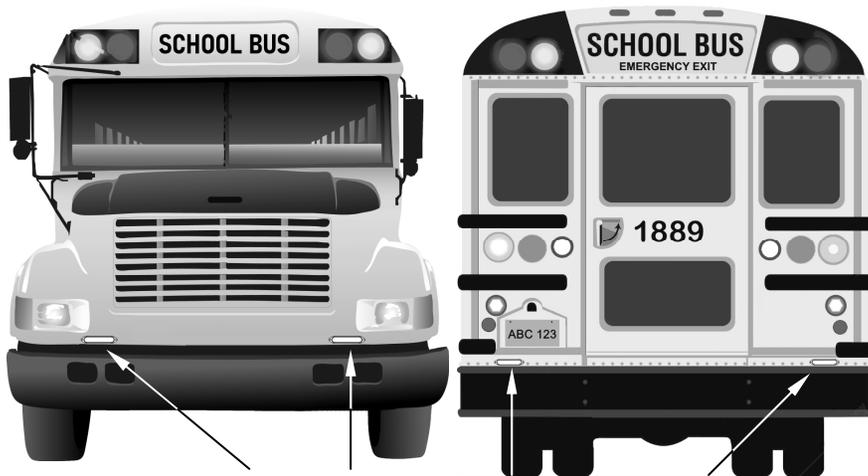

Mount the warning lights directly above the bumper and as close to the outer edge of the bus as practical. Ensure the mounting surface is flat and that the lights are facing directly to the front or rear.

